

---

**USER MANUAL**  
DVD/MPEG4/CD/MP3/PLAYER

**ADVP-204**



Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.



## Content

---

### INTRODUCTION

■ Safety Precautions	1
■ Panel Illustration	2
■ Remote Control	3

### CONNECTIONS

■ Connecting to a TV set	4
--------------------------	---

### Advanced Features

■ MP3/WMA/MPEG4 playing	5
■ PICTURE CD PLAYBACK	6
■ SYSTEM SETUP	6

### OTHERS

■ Specifications	8
■ Accessories	8

## Safety Precautions



### Safety is Important



To ensure your safety and the safety of others, please read the Safety Instructions before you operate this product.

**Keep this information in a safe place for future reference. Please read all the safety information before using the product. Safety Considerations.**

- ◆ Position the cables so that they cannot be walked on or pinched by items placed on or against them.
- ◆ Do not use the portable DVD Player in humid or damp conditions.
- ◆ Do not allow the portable DVD Player to get wet.
- ◆ Do not expose the portable DVD Player to dripping or splashing.
- ◆ Do not place water filled objects such as vases on top of the portable DVD Player.
- ◆ Do not place naked flame sources, such as candles, on the top of the portable DVD Player.

### Cleaning

- ALWAYS unplug the portable DVD Player before you clean it.
- Do not use liquid or aerosol cleaners.
- Clean the portable DVD Player with a soft, damp (not wet) cloth.

### Ventilation

- ◆ The slots and openings on the set top box are for ventilation. Do not cover or block them as it may cause overheating.
- ◆ NEVER let children push anything into the holes or slots on the case.

### Servicing

- ◆ There are no user serviceable parts in this portable DVD Player.
- When servicing, refer to qualified service personnel.
- Consult your dealer if you are ever in doubt about the installation, operation or safety of this unit.

### Battery Disposal

- ◆ Please ensure batteries are disposed of safely.
- ◆ Never dispose of batteries in a fire or with other household waste.
- ◆ Check with your local authority for disposal regulations.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

1. The apparatus shall not be exposed to dripping or Splashing and that no objects filled with liquids, such as Vases, shall be placed the apparatus.
2. The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
3. To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
4. The mains plug of apparatus should not be obstructed or should be easily accessed during intended use.

 


### Special notice

A few highlights or dark spots may occur on the LCD screen. It is a very common phenomenon of the active matrix display technology, and does not mean any defects or faults. Never try to repair this machine by yourself. In case of any faults, Please turn off the unit at once, and notify our Company or the corresponding dealer. The display is made up of many precision electronic components. Any disassembly or modification may lead to further damage.


## Panel Illustration

## Introduction

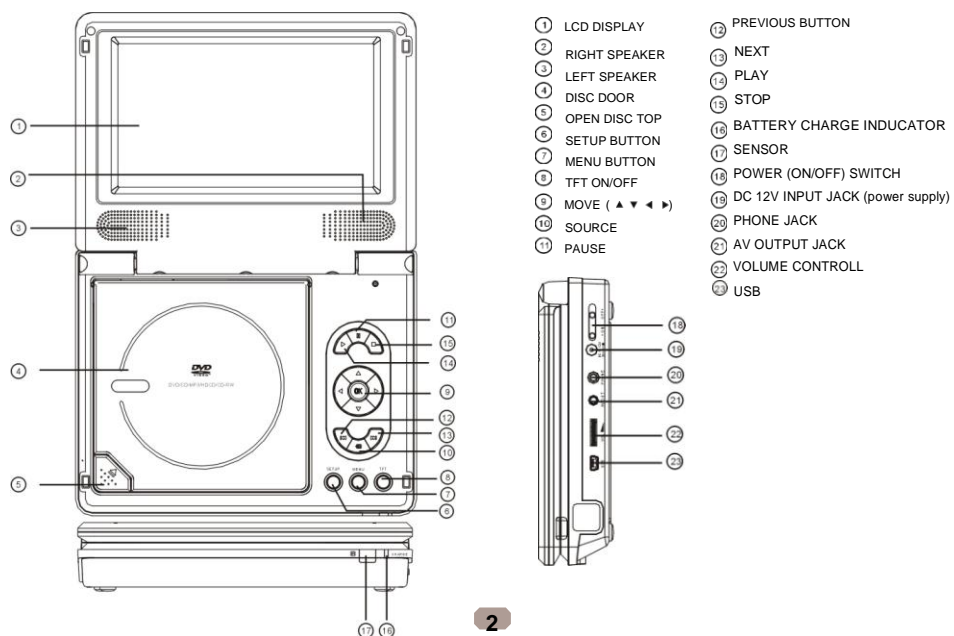

## Remote Control

 
### Remote Control

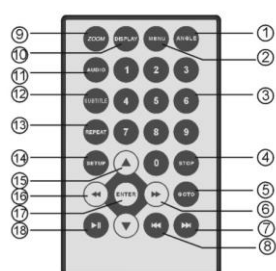

- |                     |               |
|---------------------|---------------|
| ① ANGLE             | ⑩ DISPLAY     |
| ② MENU(TITLE)       | ⑪ AUDIO       |
| ③ NUMBER KEY SELECT | ⑫ SUBTITLE    |
| ④ STOP              | ⑬ REPEAT      |
| ⑤ GOTO              | ⑭ SETUP       |
| ⑥ FWD               | ⑮ MOVE (▲▼◀▶) |
| ⑦ NEXT              | ⑯ REV         |
| ⑧ PREV              | ⑰ ENTER       |
| ⑨ ZOOM              | ⑱ PLAY/PAUSE  |

#### Note:

 1. In this manual, "▲▼◀▶" will be used to represent the different NAVIGATION ARROWS on the remote control.
2. In order to operate any of the remote functions. First push the Power switch in "ON" position.
3. TITLE Function : The content of a DVD is often divided into several titles that contain multiple menus. Press for approx. 2 Seconds in the menu button, the title is displayed. Using the ▲▼◀▶ buttons or the numerical buttons (0-9) on the remote control, you can select the desired title or the desired option. Confirm with OK.

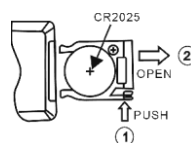

#### HOW TO REPLACE THE BATTERY

- STEP 1: PUSH THE BUTTON TOWARD LEFT;  
STEP 2: PULL THE BATTERY LOADER OUT

 
#### BATTERIES

INCORRECT USE OF BATTERIES MAY CAUSE THEM TO LEAK, CORRODE OR EXPLODE.

Be sure to place the batteries in the correct direction.

- ◆ It is dangerous to charge/heat/open or short-circuit the batteries.
- ◆ Do not leave dead or expired batteries or mix old/new batteries.
- ◆ When not using the remote control for a long time, remove the batteries. When operating range becomes reduced, replace all batteries with new, fresh ones.
- ◆ If leakage from the battery occurs, wipe the battery liquid from the battery compartment, then replace.

### Connecting to a TV Set

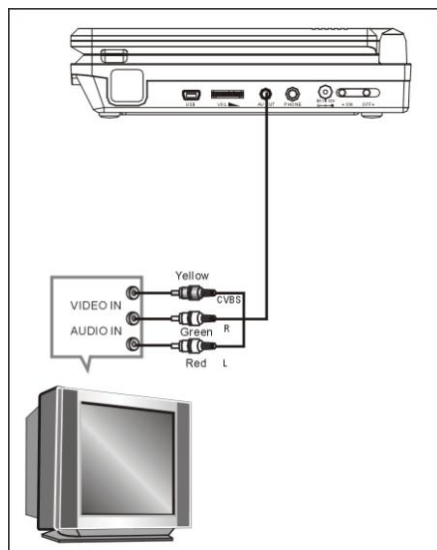

### Connections

#### Phone Jack Function

Insert the earphone into the earphone jack, to listen the music or movie privately.

 
#### Battery charging

 
When the unit battery is powered out, connect the AC adapter onto the unit. the battery will charge automatically.

#### Volume adjust

Use VOLUME CONTROLL in the side of the unit to adjust the volume.

**MP3/WMA/MPEG4 PLAYING**

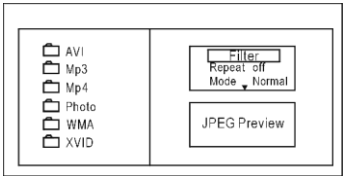


Insert the MP3/WMA/MPEG4 disc, use navigation keys to open the desired directory. Press ENTER to enter the sub directory. Use the navigation keys to select the desired track and then ENTER to play the file. Press the PLAY/PAUSE key to pause the playback, press the stop key to stop the play. To return to the upper menu, press navigation key to choose the icon  and press ENTER to confirm. Open the option menu using the navigation keys

Filter: Allows selecting the categories of files displayed in the browser list.

Repeat: To switch different repeat playing mode

 Select single option to enable one file repeat, select folder option to enable all the files in the folder repeat.

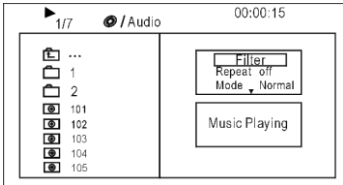

Mode: Select different playing mode

Normal: Normal playback

Shuffle: Shuffle mode enabled. When playback reaches the end of the current chapter/track, playback jumps to a random chapter/track.

Music Intro: In this mode, the unit will play the first 10 seconds of the file and then skip to the next file.

Edit Mode: Use this option to enable programmed playback mode. Select the mode, press LEFT Navigation key to directory and press ENTER to choose the desired track and press Add to program to program the playback list.

 
Program view: Display directory/folder.

 
Browser view: Display playback list directory.

Add to program: Use this in combination with Edit Mode to create a play list.

Clear program: When entered the Browser View and in complete stop state (press STOP button twice), use this option in combination with Edit Mode to delete tracks from the playback list.

PICTURE CD PLAYBACK

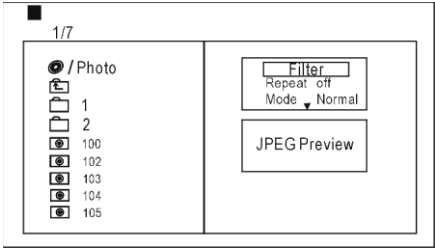

Press **Navigation key** to choose the root directory and press **ENTER** button to enter the subdirectory. Press **Navigation key** to choose the desired picture and press **ENTER** to view the picture. If you want to return to the upper menu, press **Navigation key** to choose  and press **ENTER**.

**Image rotation**

In picture play state, press **Navigation key** to rotation the picture, press **ANGLE** button to change the picture scan mode.

SYSTEM SETUP

**MENU OPERATION**

Press the **SETUP** button on the remote control and the **SETUP MENU** will be displayed. Use the direction buttons for up and down movement to select the desired item, then press the **ENTER** button to confirm. Press **LEFT** direction button return to the main menu. To exit the setup, press the **SETUP** button. Press right navigation key to enter the submenu.

**LANGUAGE SETUP**

Select **Language** in the setup menu.

Language	Language
Video	Subtitle
Rating	MPEG4 Subtitle
Misc	Audio
	DVD Menu

**OSD Language**

Use this item to select the language of the setup menu and screen display.

**Subtitle**

Set the default subtitle.

*Note: not every disc supports this function.*

**MPEG4 Subtitle**

Set default MPEG4 subtitle encoding option.

*Note: not every disc supports this function.*

**Audio**

Set the default audio language.

*Note: not every disc supports this function.*



## SYSTEM SETUP

### DVD Menu

Set the default DVD menu language.

*Note: not every disc supports this function.*

### VIDEO SETUP

Select **Video** in the setup menu, and display the **Video** submenu:

Language	Aspect Ratio
Video	TV System
Rating	Smart Picture
Misc	

### TV System

This product supports output of various systems (**NTSC, PAL**).

When connecting to a TV set make sure that both units have the same PAL / NTSC settings.

### Smart picture

Adjust display effect:

Standard: default effect.

Bright: internal setting for brightview effect.

Soft: internal setting for softview effect.

Dynamic: user adjusts brightness, contrast, color etc.

### RATING SETUP

Select **Rating** in the setup menu, and display the Rating submenu:

*Note: Not all DVD support ratings.*

Language	Parental Control
Video	Set Password
Rating	
Misc	

### Parental Control

Set the desired level.

*Note: not every disc supports this function.*

### Set Password

Use the 0-9 keys to input four digits (password), then press **ENTER** to confirm.

*Note: If you forget your password, please use the universal password 6666 to unlock.*

### MISC SETUP

Select **MISC** in the setup menu, and display the submenu:

\* Use Default Settings

Reset data to factory default.

Language	Use Default Settings
Video	
Rating	
Misc	

Specifications


Other

Play mode	NTSC/PAL
Disc mode	DVD, VCD, CD, MP3, CD-R, CD-RW, JPEG, DVD+ -R/W, MPEG4,
Video characteristic	
Video S/N ratio	65dB.
Resolution	500 lines.
Audio characteristic	
Frequency response	fs 96KHz: 20Hz-20KHz: +/-1dB
Audio S/N ratio	90dB
Dynamic range	80dB
Distortion	< 0.01%
D/A Converter	96KHz/24bit


Output characteristic	
Display Device	Color TFT-LCD
Screen Size	7 inches
Video output	1Vp-p(75 Ω)
Audio output	2CH
Power Voltage	DC IN 12V
Power consumption	≤15W
Size	206x160x40mm
Weight	1.0kg

Specifications are subject to change without notice.


Accessories




AC/DC adapter



Remote control



LI type batteries



Car adapter



If at any time in the future you should need to dispose of this product please note that: Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice. (Waste Electrical and Electronic Equipment Directive)